



Lance Aircraft Supply

Manuals Available

Manual Type	Aircraft
Description & Maintenance Instructions	Harvard 2, 2A & 4
NEW Erection & Maintenance Instructions (with Color Systems Diagrams)	AT6, SNJ, Harvard 2A & 3
Erection & Maintenance Instructions	T-6 (SNJ-3,-4,-5,-6)
Erection & Maintenance Instructions	AT-6C/SNJ-4
Erection & Maintenance Instructions	T-6C & T-6D
Erection & Maintenance Instructions	T-6G
Erection & Maintenance Instructions	T-6G & LT-6G
Erection, Maintenance & Overhaul Instructions	BC-1A, AT-6, A, B & SNJ-3
Flight Handbook	AT-6D
Flight Handbook Interim Revision No. 1	SNJ-4
Flight Operating Instructions	AT-6C, D (SNJ-4,-5)
Flight Operating Instructions	T-6C, Harvard 2A & SNJ-4
Flight Operating Instructions	AT-6D, F (SNJ-5,-6)
Flight Operating Instructions	T-6F/SNJ-6
Flight Training Instructions	SNJ
Inspection Requirements	T-6
Parts Catalog	Harvard I
Parts Catalog	Harvard II
Parts Catalog	Harvard 2B (AT-16)
Parts Catalog	Harvard 2, 2A & 4
Parts Catalog	AT-6C, AT-6C-15 (SNJ-4)
Parts Catalog	AT-6C/SNJ-4
Parts Catalog	T-6D & T-6F (SNJ-5 & -6)
Parts Catalog	T-6G & LT-6G
Parts Catalog	NA-64 Yale
Parts Catalog	NA-66
Weight & Balance Data	Harvard 4M
Weight Check List & Loading Data	T-6C, -D, -F, -G & LT-6G
R-1340 Parts Catalog	Pratt & Whitney
R-1340 Overhaul Manual	Pratt & Whitney